

FM Handover Sheet 06

project originator volume level type role number status revision

LAB - BBD - ZZ - XX - DR - Z - 3006



The screenshot displays a software interface for FM Handover Sheet 06, divided into two main panels: 'Processing of Location Elements' and 'BIM Model'.

Processing of Location Elements: This panel features a tree view under 'LEGO BIM' showing a hierarchy of buildings. The 'Villa Savoye (Villa Savoye)' building is expanded to show its '01 First Floor (01 First Floor)' level, which contains several RDS (Room Data Sheet) objects: RDS 0101 (RDS 0101), RDS 0102 (RDS 0102), RDS 0103 (RDS 0103), RDS 0104 (RDS 0104), and RDS 0105 (RDS 0105). Below this, other levels like 'Datum / Site Model (Datum / Site Model)', 'GF Ground Floor (GF Ground Floor)', and 'RF Roof (RF Roof)' are also listed with their respective RDS objects.

BIM Model: This panel shows a 3D model of the building. A context menu is open over the model, displaying a list of elements and their associated data. The menu items include: 'Open building space', 'All documents', 'Building Space Parts', 'Objects in space', 'Common areas for buildin...', 'Zones', 'Themes', 'Lease contracts attached...', 'BIM Elements', 'Employees located in bul...', 'Property items in build...', 'Meeting room reservation', and 'Barcode timestamp'. The 'All documents', 'Objects in space', and 'Meeting room reservation' items are highlighted with red boxes. The 'Zones' item has a sub-menu 'Objects in space' visible next to it.

At the bottom of the BIM Model panel, there are several controls: a dropdown menu showing 'LAB-BBD-00-ZZ-M3-A-0', a 'Default view' dropdown, a 'No location' dropdown, and a bar chart icon.